


REPAIR INSTRUCTIONS

CHANGE OF SEALING RINGS




**To the video tutorial:
Replacing the sealing rings**




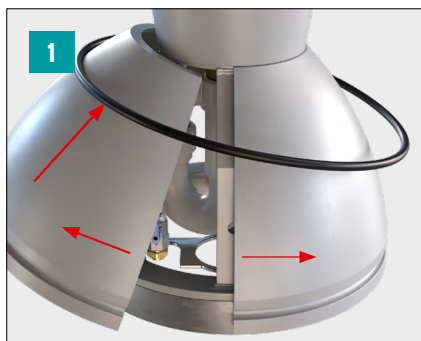


Slide up the rubber protective ring and remove the two half shells.

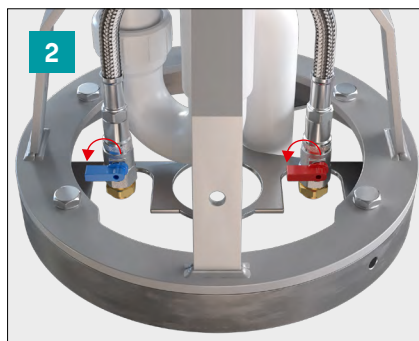

Close the shut-off valves for hot and cold water in the bottom cone.

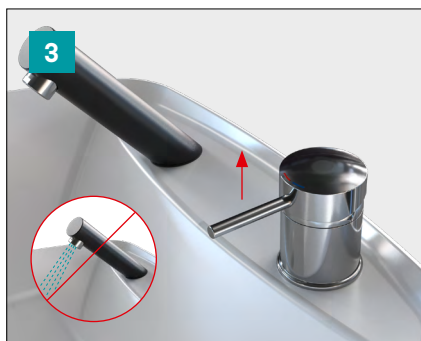


Open the mixing battery at the sink and make sure that the water is off.

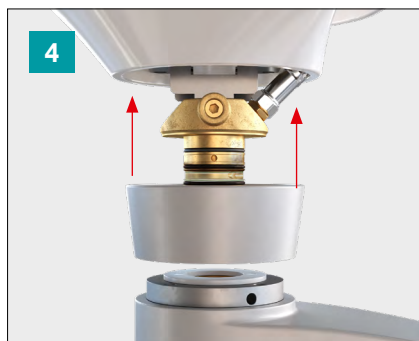

Lift off the sink and remove the cover sleeve.



Clean the tilting pivot with methylated spirit or a similar product.

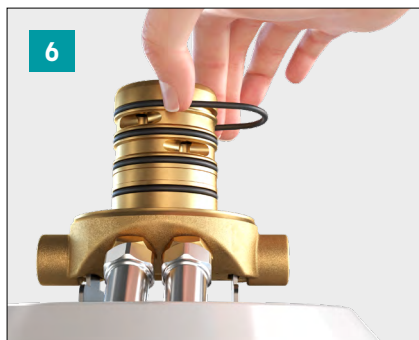

Remove the O-rings one after another.



Clean the tilt-swivel pins again with methylated spiritus or similar after removing the O-rings.




Thoroughly clean the swivel pin enclosure with methylated spiritus or similar.



Install new O-rings.



Grease the tilt-swivel pins with the provided grease. Use fingers for greasing – do not use a piece of cloth. Please note that only the provided grease may be used.

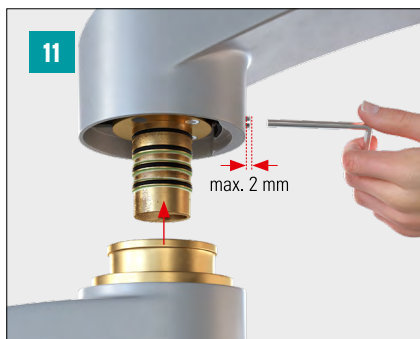

From here: Replace the O-rings on the arms

Unscrew the ball joint brake on the upper arm/lower arm with an Allen key, size 6, as far as the stop position (unscrew to the left). Lift the upper arm/lower arm upwards, turning gently.



Clean the swivel pins with spiritus or similar.



Remove the O-rings one after another.



Clean the swivel pins again with spiritus or similar after removing the O-rings.



Install new O-rings.



Thoroughly clean all swivel pin enclosure with spiritus or similar.




Grease the swivel pins with the provided grease. Use fingers for greasing – do not use a piece of cloth. Please note that only the provided grease may be used.



Replace the swivel arm, turning gently. Turn the ball joint brake back (rightwards), until the swivel arm moves freely.

Caution! Care is needed to ensure that the white thrust ring is lying evenly within the housing.

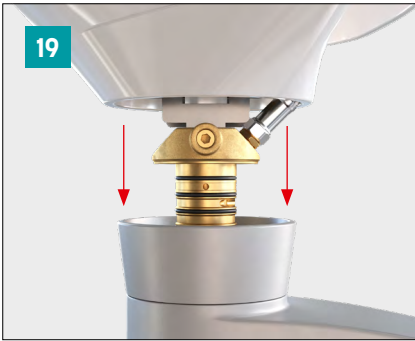


Apply the cover sleeve and afterwards, vertically align and install the sink.

Attention: Do not jam it!



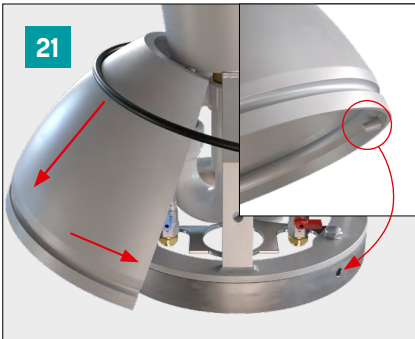


Open again the shut-off valves for hot and cold water in the bottom cone and check for leakage.



Place half shelves around the bottom cone and connect them while sliding down the rubber protection ring over the half shelves into the radial groove.

Technical changes and colour deviations reserved.
All dimensions are approximate and in mm. They are not legally binding.

Jobst GmbH
Albert-Einstein-Str. 4
D-73529 Schwaebisch Gmuend

 +49 7171 82004
 info@jobst-salon.de
 www.jobst-salon.de

[#welovehairstylists](https://www.instagram.com/welovehairstylists)

Follow Jobst

